


Life Fitness Models 9100, 9500HR, 9700HR, and 9700HR w/Decline Treadmills
DIAGNOSTICS: SYSTEM TEST – WAXER MANUAL MODE

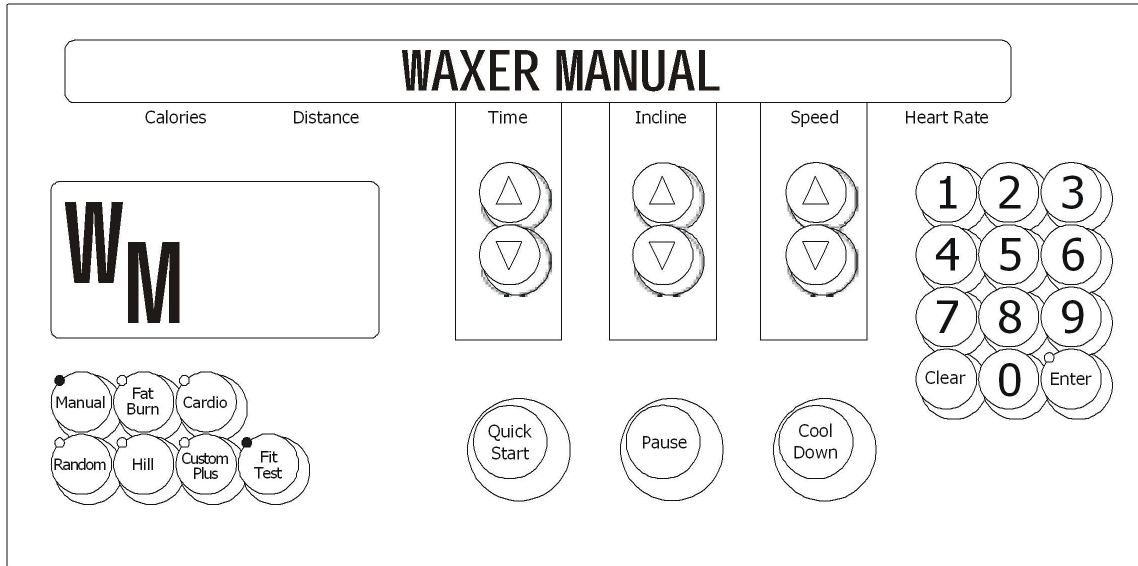

Upon entry into this test the letters WM (waxer manual) will be in the profile window. This test allows the user to manually fire the waxer system. It allows the user to see information concerning the waxer motor as well. The waxer information will scroll automatically every 3 seconds.

The following is a list of the current information that can be seen. If an error is display refer to the troubleshooting section for corrective action.

ERROR CONDITION

WAXER UNPLUGGED

DISPLAYED INFORMATION

WAXER FIRED – XXX
 WAXER - XX/100 FULL
 MANUAL WAX- XX TIMES
 NEXT WAX - XX HOURS
 INITIAL WAX- XX MINS
 WAX INTERVAL XX MINS
 MIN WAX SPEED- X.X

WAXER FIRE TEST

TO FIRE WAXER PRESS THE
 QUICK START KEY

The speed system and incline systems can be activated in this test as well. However, the display will only show the target speed or incline for two seconds while the speed/incline keys are being pressed. It will then return to showing the waxer information.

Press the 'CLEAR' key to exit the Waxer Manual test and return to the Waxer Automatic test.
 Press the 'ENTER' key to advance to the Waxer Errors test.