



Life Fitness Model 8500, 9100, and 9500HR Cross-Trainers CT8500, CT9100, and CT9500HR Display Consoles


The following three(3) Display Consoles are representative for each model crosstrainer. The following Diagnostic State pages depict a CT9100 Display Console. Regardless of Display Console, the Message Center always provides current Diagnostic Data.

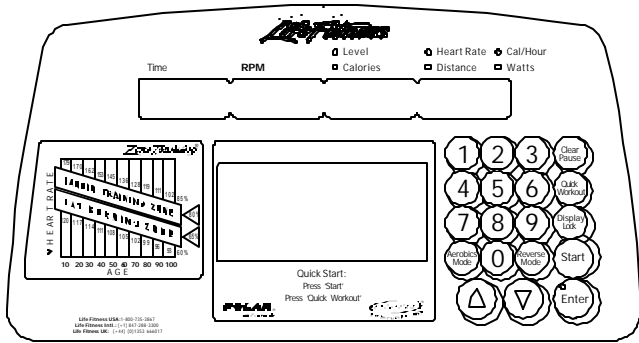


CT9500HR (Display Lock Equipped)

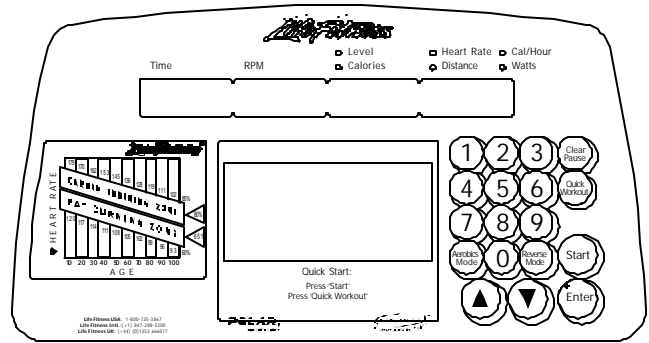

CT9500HR

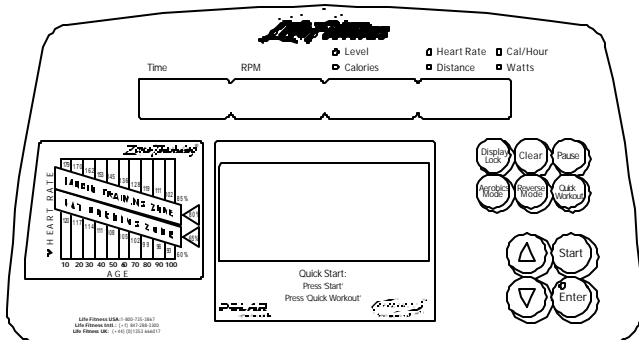

CT9100

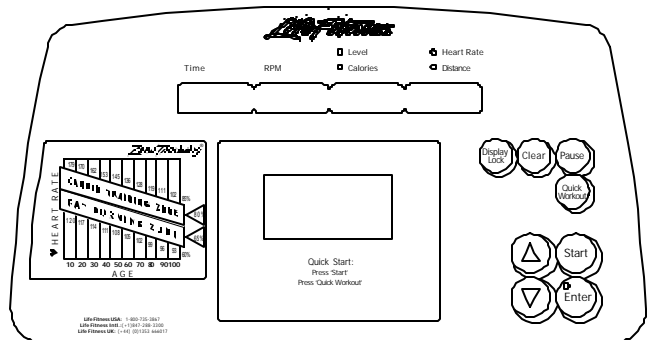

CT8500

Life Fitness Model 8500, 9100, and 9500HR Cross-Trainers

ENTERING DIAGNOSTIC STATES 1-17

To enter the diagnostic mode, proceed as follows:

1. Press down and hold the DOWN ARROW key. While doing this, press the CLEAR (CT9100) or CLEAR/PAUSE (CT9500) key twice within 2.5 seconds. The console will go blank momentarily, but do not release the DOWN ARROW key. As soon as the MESSAGE CENTER displays the word "DIAGNOSTICS," then release the DOWN ARROW key.
2. Press the ENTER key to scroll through diagnostic states 1-17.
3. Press the UP and DOWN ARROW keys to activate a selection within a diagnostic state.
4. Press the CLEAR key to scroll back to a previous diagnostic state
5. Press the CLEAR key as required to exit out of the diagnostic program.
6. For diagnostic states that have a subdirectory, press the DISPLAY LOCK key to enter.

NOTE: RPM diagnostic mode requires pedaling.

NOTE: Factory defaults are displayed when the LED is illuminated on the ENTER key.