


Life Fitness Models 9100, 9500HR, 9700HR, and 9700HR w/Decline Treadmills
DIAGNOSTICS: SYSTEM TEST – INCLINE AUTOMATIC MODE

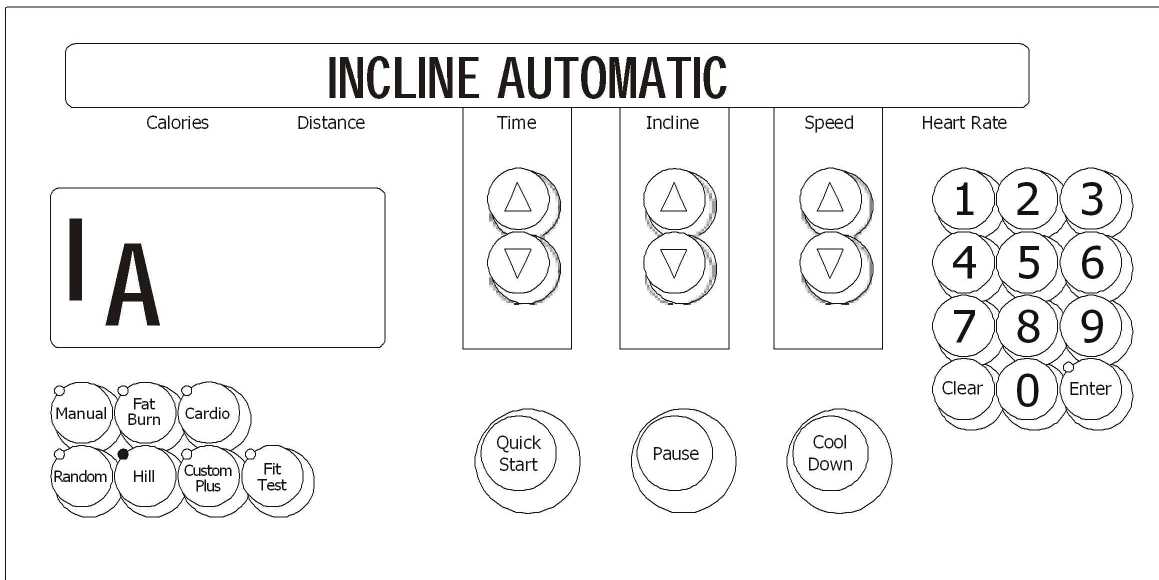

Upon entry into this test the letters IA (incline automatic) will appear in the profile window. This test allows the user to test the lift motor and switches controlling the target incline. The user can select a target incline by using the incline arrow keys. The actual incline as calculated by the time count is shown in the actual portion of the message center.

For non-decline units: The state of the level switch will be displayed in the profile window. A zero "0" displayed in the profile window shows the level switch in the closed position. As the unit is inclined the zero "0" displayed should disappear to indicate that the level switch is functioning.

For decline units: The state of the level switch will be displayed in the profile window. A zero "0" displayed in the profile window shows the level switch in the closed position. As the unit is inclined the zero "0" displayed should disappear to indicate that the level switch is functioning.

The speed system can be activated in this test as well. However, the display will only show the target speed for two seconds while the speed keys are being pressed. It will then return to showing the incline information.

Press the 'CLEAR' key to exit the Incline Automatic test and return to the System Test Menu.

Press the 'ENTER' key to advance to the Incline Manual test.